


RECHARGEABLE TRAVELLER'S SHAVER

Art. No.: 22865

INSTRUCTION MANUAL

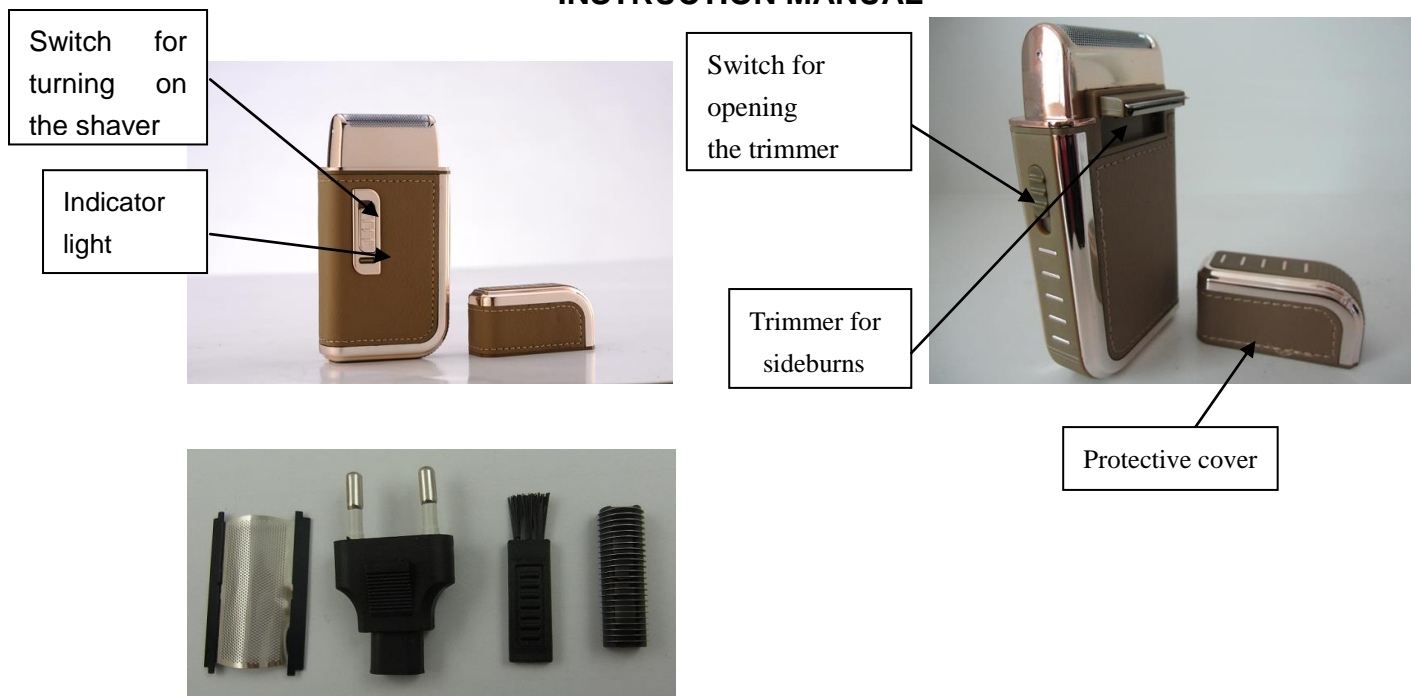

Accessory: 1 pc extra shaving foil, 1 pc plug, 1 pc cleaning brush, 1 pc extra razor blade insert

Photo for changing the foil and razor blade insert:



Battery: 1 PC 1.2V 600MaH Ni-Mh rechargeable battery

A. How to use

Please charge device before initial use or when using again after a long time.

Charging method:

1. Make sure to charge by AC 220V.
2. Turn off the device, connect with plug and plug into a household electricity outlet. Please DO TURN OFF before charging.
3. The indicator red light will be ON during charging and will stay on as long as shaver is fully charged.
4. Unplug device when fully charged.
5. Charging time: 8-12 hours.
6. Working time: about 40 minutes.

Shaving method:

1. Turn on the device. Start shaving by applying gentle pressure to your face. Stretch your skin with your free hand and move the shaver back and forth in the direction of your beard.
2. To trim your sideburns, slide the trimmer switch up. Place at a right angle to your skin and move downwards.
3. When finished, turn off the device and put the protective cover back on.

B. Cleaning method

1. Turn off the switch, Pull out the foil holder and use the cleaning brush to clean the blades and the foil. Please refer to above 4 photos to change the foil and razor head.
2. Please clean shaver after each use in order to keep its functioning in proper order.

C. Important Notes

• Never charge with electricity supply over 240V!

- Don't extend above mentioned charging time. Don't charge when room temperature falls below 0°C or exceeds 40°C. Both may affect the battery's lifetime.
- Don't charge or place the product in direct sunshine near the heating system or in a moist location. The device may be damaged or an electric short-circuit may occur.
- DO NOT remove sponge under the razor head.
- Never clean the body with water.

DISPOSAL:

The packaging material is reusable. Dispose of the packaging in an environmentally friendly way by putting it in the appropriate recyclable waste collection containers.



Dispose of the product and the batteries in view of the environment if you want to separate. The device and the batteries must not be thrown in with domestic waste. Take them to a recycling center for used electrical and electronic devices. For more information you can consult your local government. Remove batteries first.

Eurotops Versand GmbH
Elisabeth-Selbert-Straße 3
40764 Langenfeld, Germany



If technical support is needed, please call ...

in Germany 0180 . 530 63 63* or info@eurotops.de

in Austria 01 . 230 60 43 12 or info@eurotops.at

in Switzerland 044 . 28 36 125 or info@eurotops.ch

in the Netherlands 026 . 37 36 333 or info@eurotops.nl

in France 0892 . 700 470** or info@eurotops.fr

* 14 Cents/minute via German landline, max. 42 cents/minute via mobile phone network

**34 Cents/minute via French landline

A possible return of products should be addressed to the return address stated on your invoice.

The manual only reflects the technical conditions available under printing. Any changes in technology and equipment are reserved.

© 04.07.2013