 


RCC "MASTER" WATCH

User's manual

PLEASE READ THE MANUAL BEFORE YOUR FIRST USE. KEEP THIS MANUAL SAFE FOR FUTURE REFERENCE!

DESCRIPTION

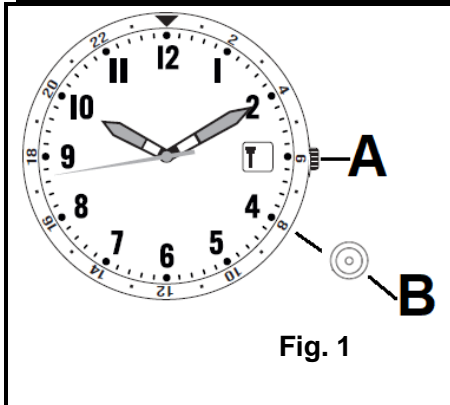

A. MODE

B. SET

FEATURES

- DCF Radio controlled signal reception
- Automatic summertime (DST)
- Calendar
- Time zone setting
- Choice of language of day of the week : German or English

Specifications

- 3 ATM - 1 x lithium CR2032 battery, 3.0V

IMPORTANT: Button B  is a recessed push button. Use the tip of a pen or a sharp objet to press it.

RESET

The reset operation should be done if you encounter the particular cases below:

- A loss of synchronization between the hands and the internal saved RCC time - due to factors such as magnetic fields, important shocks or strong vibrations.
- If the watch fails to set itself correctly and RCC signal status has not been successfully received.

To ensure successful completion of reset procedure, the three hands should point to **12H**. If it is not the case, repeat procedure several times until they all point to **12H**.

IMPORTANT: Button B  is a recessed push button. Use the tip of a pen or a sharp objet to press it.

1. Press and hold button B until the LCD screen displays "RS", flashing. **Important note: When holding button B, "EU" will display flashing in the meanwhile BUT KEEP ON HOLDING UNTIL "RS" DISPLAYS, FLASHING.**
2. A few seconds later, the minute hand first rotates. The 2 hands may take some time to rotate. **WAIT, BE PATIENT AND DO NOT PRESS BUTTON B UNTIL THE HOUR, MINUTE AND SECOND HANDS STOP ROTATING AND POSITION AT 12 O'CLOCK POSITION.**
3. When all hands points to 12 o'clock position, don't press any button and wait till the hands fast spin and reach the internal (LCD) time. The watch will then show the correct time.

 
Notes:

- If the second hand stops and is not positioned on the 12 digit, press button B repeatedly to position it on this digit. Then wait until the hands rotate, and then stop when they will reach the internal time (LCD).
- In the case the hands are far from the 12 digit or have passed it, press and hold button B until the

hands turn quickly. When the minute and hour hands point to the 12 digit and the second hand is close to it, release button B. Then, repeatedly press button B to align the second hand with the minute and hour hands. Wait for the hands to rotate quickly and stop when they will reach the internal time (LCD).

MODE FUNCTION

In normal time mode display, press A button to view the different types of information:

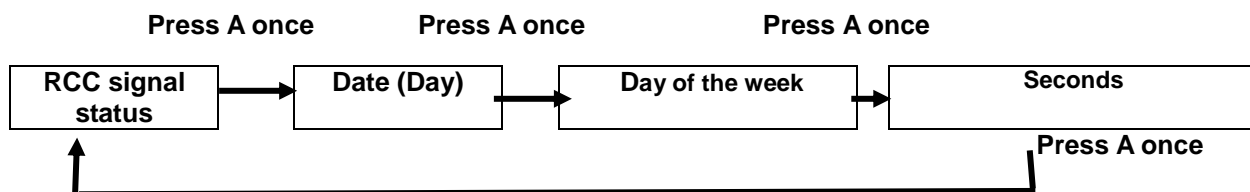

MANUAL SIGNAL RECEPTION

DO NOT MOVE THE WATCH OR TOUCH THE BUTTONS WHEN IT IS IN RCC MODE!

To enter manual signal reception mode: In any mode, press and hold button A till the RCC signal icon “T” displays flashing. The second hand rotates and stops when it points to 12 o’clock.

Refer to table below for the strength of the signal.

The signal reception process will take 3-8 minutes.

SIGNAL STRENGTH STATE	
	PERFECT
	BAD

If the watch fails to set itself, leave it all night long near the window (see below for the position of watch).

Note: For the best possible reception, position your watch near a window in an upright manner, with the dial facing the window (see figure 2), or outdoors.

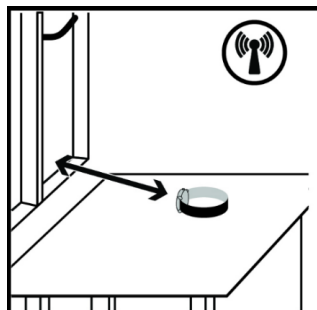 


Fig. 2

The signal cannot be received for the following reasons:

- near high buildings;
- near a built-up area;
- in an area outside the radio signal coverage area;
- near electronic or electrical equipment such as TV, wireless radio, mobile phones and computer which may cause undesirable signal interferences;
- near sources of magnetism or electro-magnetism;
- near heat sources;
- in conditions of bad weather

QUALITY SIGNAL RECEPTION CHECK

Press button A stepwise till the RCC signal status T displays.

Refer to the table: “Signal strength state” above in “Manual reception” section.

AUTOMATIC SIGNAL RECEPTION

The watch will attempt to receive the DCF radio-controlled signal between 2AM and 3AM every day.

The signal is always good at night. If your watch cannot get the signal in the daytime, just leave it nearby a window where the signal is strong overnight to get a radio signal.

MANUAL SETTINGS

A. Time zone setting

IMPORTANT: Button B  is a recessed push button. Use the tip of a pen or a sharp object to press it.

You can adjust the time zone to enable your watch to display the correct time of other countries when you travel.

1. Press **button B** and hold until the display shows EU or one of the symbols of time zone indicated in the table below.
2. Press **button A** to choose. Refer to the table below for the desired time zone.
3. Press **button B** to confirm.

Time zone table

SYMBOL ON LCD DISPLAY	TIME ZONE	OFFSET HOURS UTC
EU	European Union	+ 1H
+ 2	Athens	+ 2H
+ 3	Moscow	+ 3H
+ 4	Dubai	+ 4H
+ 5	Karachi	+ 5H
+ 6	Dhaka	+ 6H
+ 7	Bangkok	+ 7H
+ 8	Beijing	+ 8H
JP	Japan	+ 9H
+ 10	Sydney	+ 10H
+ 11	Noumea	+ 11H
+ 12	Auckland	+ 12H
-12	Baker Island	-12H
-11	Samoa	-11H
-10	Honolulu	-10H
-9	Alaska	-9H
-8	Los Angeles	-8H
-7	Denver	-7H
-6	Chicago	-6H
-5	New York	-5H
-4	Santiago	-4H
-3	Rio	-3H
-2	Recife	-2H
-1	Azores	-1H
UK	United Kingdom	0H

B. Language of LCD Display

IMPORTANT: Button B  is a recessed push button. Use the tip of a pen or a sharp object to press it.

The display information can either be in German or English.

1. Press **button B** and hold until the LCD display shows **EU**.
2. Press **button B** once, the LCD display shows **DE** (German) or **EN** (English).
3. Press **button A** to choose.
4. Press **button B** to confirm.

The day of week is now displayed in the chosen language.

WARNINGS

- Always make sure the crown is fully return to the case to ensure water resistance.
- DO NOT operate the crown or buttons in water or when the watch is wet.
- To prolong the appearance of your watch, avoid contact with the following :Perfumes, hairspray, cosmetics, detergents, adhesives and paints as they cause discoloration, deterioration and damage.
- To help prevent possible damage from perspiration, dust and moisture, periodically wipe your watch with a soft dry cloth.
- To ensure lasting durability please take note of the following points: Never attempt to open the case of your watch. Batteries should be replaced by a qualified technician.
- Never try to remove or replace the watch's special battery yourself.
- Use of the wrong type of battery can damage the watch.
- Your watch is shock resistant, however please be careful not to drop or hit your watch against hard surfaces, as this will cause damage.
- "Do not swallow the battery,chemical Burn Hazard"
- • This product contains a coin / button cell battery. If the coin / button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead death.
- • Keep new and used batteries away from children.
- • If the battery compartment does not close securely,stop suing the product and keep it away from children.If you think batteries might have been swallowed or placed inside any part of the body,seek immediate medical attention.



WARNING: You should not dispose of this device with your household waste. A selective collection system for this type of product is implemented by your local authorities. Please contact your local authorities to find out how and where collection takes place. These restrictions apply because electrical and electronic devices contain dangerous substances that have harmful effects on the environment or on human health and must be recycled.

This symbol indicates that electrical and electronic devices are collected selectively. The symbol shows a waste container crossed out with an X symbol.

Imported by EML –Prodis, 1 rue de Rome 93110 Rosny-sous-Bois-France/ Made in P.R.C.
qualite2@prodis.net

Marketed by EUROTOPS VERSAND GMBH D-40764 LANGENFELD, Germany