

**GARDEN FOUNTAIN WITH LED
CAT. NO.: 21268
INSTRUCTION MANUAL**



Please read all instructions carefully before assembly.

Unpack all parts from the package to ensure there are no parts missing or damaged.

1. COMPONENT LIST:

1 x pump with 8 m cable	1x transformer with 2 m cable	1 x fountain top part with PVC tube	1x base fountain with LED light set up
			

2. FOUNTAIN ASSEMBLY INSTRUCTIONS:

- Remove product from the box, set the base of fountain on the ground and put the top part onto the base.
- Attach the plug of LED lamps to the pump and screw together tightly as shown in figure1.



Figure 1

- Pull out the PVC tube to connect with the pump as shown in figure2.



Figure 2

- Place the pump in the tank and gently press down, making sure that the suction cups are firmly gripped.
- Fill the tank with clean water and check the water level from the back opening to make sure that the pump is fully submerged.
- Connect the pump to the transformer as shown on figure 3



Figure3

- Connect the transformer to a proper power supply

Note: The diagrams shown are for illustrative purposes only.

3. WARNINGS:

- 1). Do not exceed the voltage shown on the pump. Use a proper power source as indicated on the pump label.
- 2). Always disconnect the pump from the power source prior to beginning any maintenance or work on the pump or fountain.
- 3). The pump must be fully submerged in the water to operate properly and to prevent the pump from overheating.
- 4). Do not plug-in or use this product if any part of it appears to be damaged or operating abnormally.

4. DISPOSAL:

The packaging material is reusable. Dispose of the packaging in an environmentally friendly way by putting it in the appropriate recyclable waste collection containers.



Dispose of the product and the batteries in view of the environment if you want to separate. The device and the batteries must not be thrown in with domestic waste. Take them to a recycling center for used electrical and electronic devices. For more information you can consult your local government. Remove batteries first.

Eurotops Versand GmbH
Elisabeth-Selbert-Straße 3
40764 Langenfeld, Germany



If technical support is needed, please call ...

in Germany	0180 . 530 63 63* or info@eurotops.de
in Austria	01 . 230 60 43 12 or info@eurotops.at
in Switzerland	044 . 28 36 125 or info@eurotops.ch
in the Netherlands	026 . 37 36 333 or info@eurotops.nl
in France	0892 . 700 470** or info@eurotops.fr

* 14 Cents/minute via German landline, max. 42 cents/minute via mobile phone network

**34 Cents/minute via French landline

A possible return of products should be addressed to the return address stated on your invoice.

The manual only reflects the technical conditions available under printing. Any changes in technology and equipment are reserved.

© 17.01.2013