 



**MINI WASHING MACHINE**  
**Cat. No.: 23450**  
**OPERATING INSTRUCTION MANUAL**

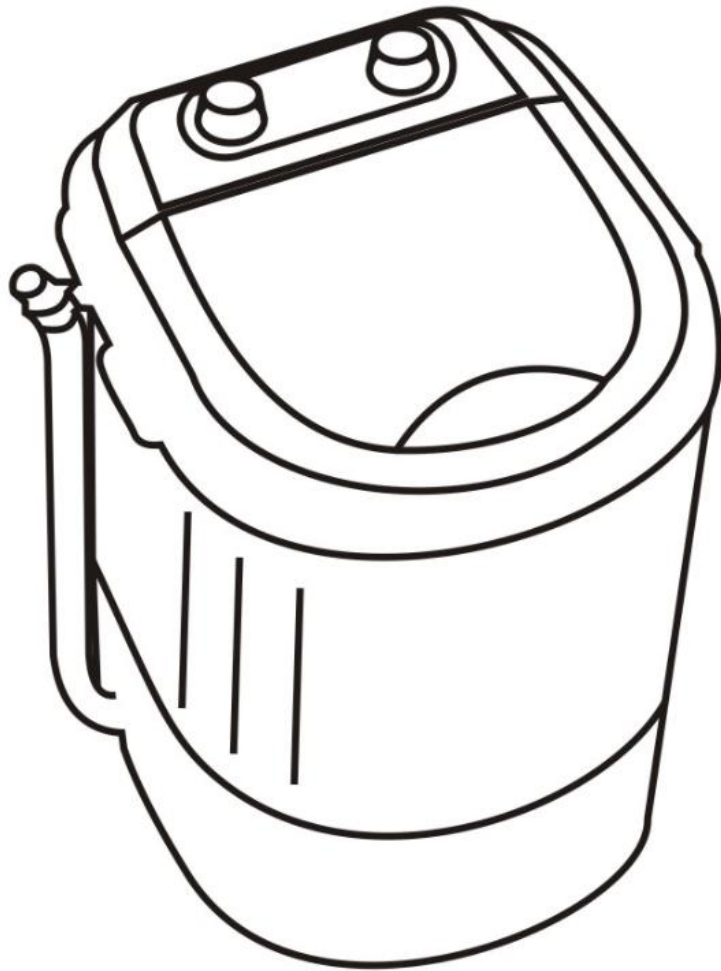

## Unpacking:

 This mini washing machine has been shipped completely assembled and with the instruction manual. After removing it from the carton, inspect it and make sure below parts are not damaged during the delivery.

## Parts Diagram

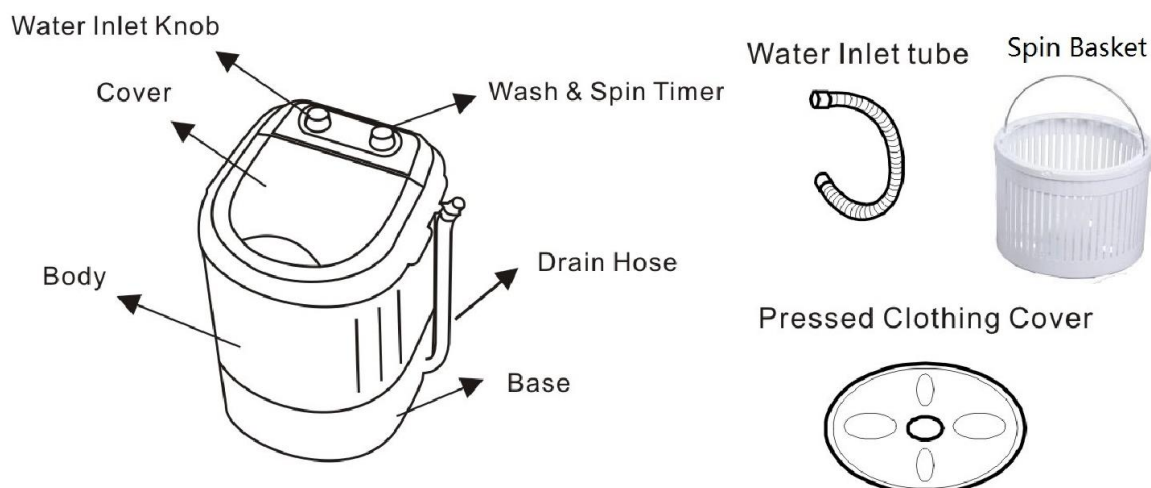

## Preparation for Washing:

1. In order to keep the ventilation free, please remove the base packing foam from under the washing machine.
2. Take off the Water Inlet Knob of the washer, then connect the Water Inlet Tube between the inlet hole of the washer (located under the Water Inlet Knob) and the water tap.
3. Take out the spin basket from inside the tub by turning the basket clockwise.
4. Please attach the drain hose by the designated suspension (nozzle up as shown in above pic.) to prevent water leaking out.

 
## Washing:

1. Insert the plug to the power supply mains, which matches the appliance electric rating printed on the rating label.
2. Put the clothes into the tub. Please do not overload as it is only a mini machine.
3. 3 water levels (low, middle, high) indicated on the tub, select your water level according to the amount of clothes.
4. Turn on the water tap and make sure the water running into the washer smoothly via inlet tube. And turn off the water tap when the water is up to your required level.
5. Add washing powder suitable for the textile fabrics and according to the amount of clothes being washed.

- Turn the wash timer between 0 to 10 minutes for washing. This will start the washing cycle. After the washing cycle is completed, drain the water by unhooking the drain hose from the side of the machine and laying it over a drain or bath. The water will automatically drain away.

### Spinning:

- After the water has completely drained away, take out the wet clothes from the tub, put the spin basket into tub, make sure basket's clip fastened to the cluster's clip closely by lowering the basket slowly into the tub central position and turning the basket anti-clockwise to clip it in place.
- Put the clothes into the basket uniformly, and not lopsidedly so that it can spin evenly.
- Press the clothes down firmly and place the Pressed Clothing Cover over them

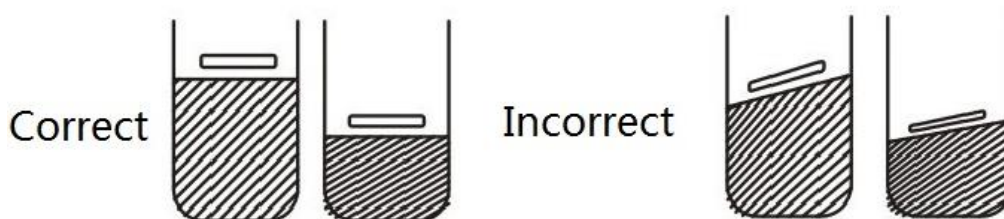



- Turn the spin timer between 0 to 3 minutes for spinning. This will start spinning cycle.

### Technical Data:

  Model:	XPB30-40 (Cat. No.: 23450)	Rated spin power:	80W
Rated Voltage:	220V	Wash Capacity:	2.5kg
Rated Frequency:	50Hz	Spin Capacity:	2.2kg
Rated Wash Power:	160W	Water Protection:	IPX4

### Safe guards

- Do not install the washing machine in a bathroom or other humid places.
- Do not install the washing machine on an inclined or bumpy place and keep away from the wall by at least 2 cm.

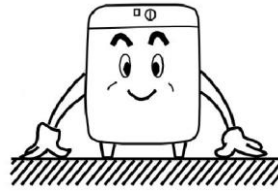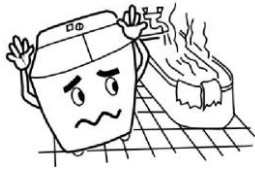


3. Never put your hands into the wash/spin tub while the washing is in operation, to prevent injuries.
4. Keep the washing machine away from places where it is exposed to the sun.



5. Do not pour water on the control panel where the timer and switches are located. It may cause malfunction or short circuit.
6. Do not allow children to play with the washing machine to prevent injury.



 7. Never insert water hotter than 50 °C into the washing machine. It may change the shape of the plastic parts in the washing machine and cause malfunction.
8. Do not put carpet or soft object below the washing machine to avoid blocking the air ventilation.

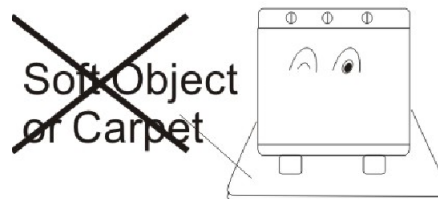

9. Do neither put flammable/inflamed items near/on top of the washing machine nor sharp/heavy objects.



1. Please wash the light colour clothes and dark colour clothes separately.



3. Please remove coins and sharp objects from clothes before washing.



 
5. Do not wash or dry any clothes containing petrol or alcohol.



2. Please wash dirty clothes alone.



4. Please turn socks inside-out when washing.

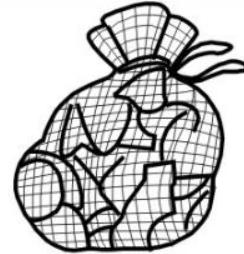

6. Please place small items and knitted items in a washing net before washing.

**Caution:**



1. The machine should connect to single phase electric socket with reliable earth connection.
2. Please use the socket within rated electric current, which is higher than 5 Amp alone.
3. Please do not cut, twist, damage the power cord or hang heavy items on it, to prevent power cut and avoid short-circuit.
4. Please do not pull out the plug from power supply socket when your hands are wet.

5. This appliance is not intended for use by persons with reduced physical fitness, sensory or mental capabilities, or lack of experience and knowledge. Unless they have been under supervision to ensure that they do not incorrectly operate the appliance.
6. If the power cord is damaged, it must be replaced by the manufacture, its service agent or similar qualified persons.

### Disposal:

The packaging material is reusable. Dispose of the packaging in an environmentally friendly way by putting it in the appropriate recyclable waste collection containers.



Dispose of the product and the batteries in view of the environment if you want to separate. The device and the batteries must not be thrown in with domestic waste. Take them to a recycling center for used electrical and electronic devices. For more information you can consult your local government. Remove batteries first.

Eurotops Versand GmbH  
Elisabeth-Selbert-Straße 3  
40764 Langenfeld, Germany



If technical support is needed, please call ...

in Germany            0180 . 530 63 63\* or [info@eurotops.de](mailto:info@eurotops.de)

in Austria            01 . 230 60 43 12 or [info@eurotops.at](mailto:info@eurotops.at)

in Switzerland      044 . 28 36 125 or [info@eurotops.ch](mailto:info@eurotops.ch)

in the Netherlands 026 . 37 36 333 or [info@eurotops.nl](mailto:info@eurotops.nl)

in France            0892 . 700 470\*\* or [info@eurotops.fr](mailto:info@eurotops.fr)

\* 14 Cents/minute via German landline, max. 42 cents/minute via mobile phone network

\*\*34 Cents/minute via French landline

A possible return of products should be addressed to the return address stated on your invoice.

The manual only reflects the technical conditions available under printing. Any changes in technology and equipment are reserved.

© 26.11.2013