


**RECHARGEABLE POCKET SHAVER
CAT. NO. 23510**

INSTRUCTIONS AND PRECAUTIONS



PARTS LIST & DIAGRAM

Part	Description	Qty.
1	Shaver	1
2	Foils	2 (the outer one is titanium plated, the inner one made of plain stainless steel)
3	Foil Holder	1
4	Cover	1
5	Charger	1
6	Brush	1
7	Carrying Sleeve	1
8	Power Switch	1
9	Adaptor	1

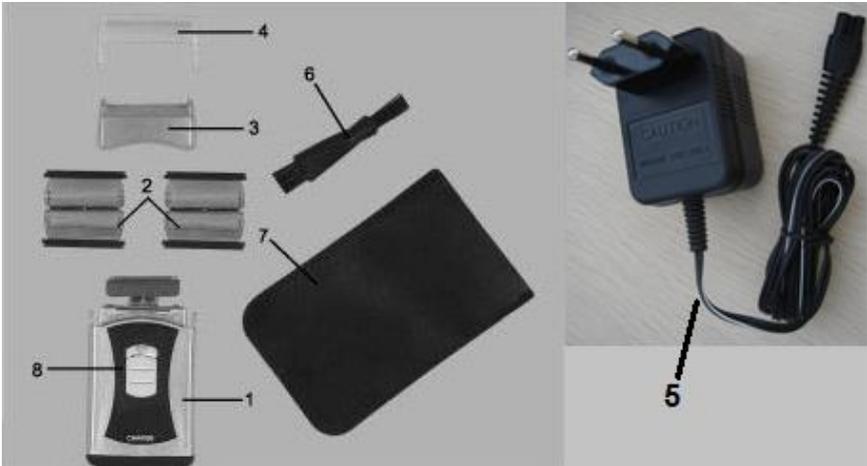

Note: Some parts are listed and shown for illustration purposes only, and are not available individually as replacement parts.

UNPACKING

When unpacking, make sure that the item is intact and undamaged. If any parts are missing or broken, please call at the number shown on the delivery documents as soon as possible.

SPECIFICATIONS

Charging Time 5-7 Hours
Speed 9000 OPM (Oscillations Per Minutes)
Charger Input 3VDC
Internal Battery Ni-Mh, 500mah

IMPORTANT SAFETY INFORMATION

1. Do not expose to moisture while charging.
2. Do not reach for a plugged in Shaver (1) that is Connected to the charger if has fallen into water. Unplug immediately and drain the water away.
3. Do not charge near heaters or in direct sunlight.
4. Do not use if the Charger (5) or Charger cord has been damaged.
5. Do not attempt to remove Foil (2) covering with a screwdriver or other tools.
6. Do not use without the Foil (2) and Foil Holder (3) in place.
7. This product is not a toy. Do not allow children to play with this item.
8. Use as intended only.
9. Inspect before every use; do not use if parts are loose or damaged.
10. Turn off the Shaver before charging.
11. Do not charge immediately after prolonged use. Allow it to cool before charging.
12. Rinse the Shaver after each use and keep stored in dry cool environment and out of children's reach.

Read the **ENTIRE IMPORTANT SAFETY INFORMATION** section at the beginning of this document before using this product.

CHARGING INSTRUCTIONS

1. Attach the power cord of the Charger (5) into the bottom of the Shaver (1). Plug the Charger into an electrical outlet that is away from any source of water. **Note:** Make sure the Shaver Switch (8) is turned to OFF.
2. Once plugged in, the LED charger light on the front of Shaver housing will activate.
3. Charge for 5 to 7 hours. Do not charge for longer than the required charge time.

OPERATING INSTRUCTIONS

1. Once fully charged, remove the Charger cord from the housing, remove the Cover (4) and turn the switch to ON.
2. Gently guide Shaver over your skin. Use short back and forward strokes and do not apply too much pressure.
3. If you have not used an electric shaver before your skin may become irritated. This is a natural reaction that may last for a few days until your skin adjusts to the shaver.
4. When finished shaving, turn the switch to OFF.
5. Slide the Cover onto the Shaver head until ready to use again. When travelling keep the shaver in the Carrying Sleeve (7).

CLEANING THE SHAVER

1. After each use cuttings will collect in the Foil.
2. Clean the Foil by rinsing the Shaver head under cool running water.
3. **WARNING!** Only clean when Shaver is disconnected from the Charger and the switch is turned to **OFF**.
4. Hair trimmings may get under Foil and/or it may be necessary to replace Foil. First, press down on the tabs on either side of the Foil Holder (3).
5. Slide Foil Holder off of the top of Shaver housing, exposing the Shaver cutting heads.
6. If necessary, use the Brush (6) to clean trimmings from the exposed Shaver cutting heads.
6. If required, slide the old Foil from out of the Foil Holder and rinse the trimmings away.
7. If the Foil needs replacing, slide the new Foil into the Foil Holder so that small hole in the centre of the Foil slides over the small tab in the middle of the Foil Holder cross bar. This will hold the Foil in place.

8. If the Foil needs replacing, slide the new Foil into the Foil Holder so that small hole in the centre of the Foil slides over the small tab in the middle of the Foil Holder cross bar. This will hold the foil in place.
9. Slide the Shaver housing into the Foil Holder until it snaps into place.
10. Slide the Cover onto Shaver head.

REMOVING THE BATTERY

1. By law, the battery must be removed from the housing before the Shaver is disposed of.
2. Use a screwdriver to unscrew the Shaver Head from the top of the housing.
3. Peel off the label from the under the housing and unscrew the housing.
4. Remove the front panel off the Power Switch and remove the screw from the front panel.
5. Slide the battery holder out of housing. Remove and dispose of the battery.

DISPOSAL:

The packaging material is reusable. Dispose of the packaging in an environmentally friendly way by putting it in the appropriate recyclable waste collection containers.



Dispose of the product and the batteries in view of the environment if you want to separate. The device and the batteries must not be thrown in with domestic waste. Take them to a recycling center for used electrical and electronic devices. For more information you can consult your local government.

Remove batteries first.

Eurotops Versand GmbH
Elisabeth-Selbert-Straße 3
40764 Langenfeld, Germany



If technical support is needed, please call ...

in Germany 0180 . 530 63 63* or info@eurotops.de
in Austria 01 . 230 60 43 12 or info@eurotops.at
in Switzerland 044 . 28 36 125 or info@eurotops.ch
in the Netherlands 026 . 37 36 333 or info@eurotops.nl
in France 0892 . 700 470** or info@eurotops.fr

* 14 Cents/minute via German landline, max. 42 cents/minute via mobile phone network

**34 Cents/minute via French landline

A possible return of products should be addressed to the return address stated on your invoice.

The manual only reflects the technical conditions available under printing. Any changes in technology and equipment are reserved.

© 18.09.2013