

FM RECORDING RADIO WITH USB/SD PLAYER AND LED FLASHLIGHT

USER MANUAL

PLEASE READ THE MANUAL BEFORE YOUR FIRST USE.

KEEP THIS MANUAL SAFE FOR FUTURE REFERENCE!

PRODUCT DESCRIPTION







Fig. 1

No.	Description	No.	Description
1.	Volume adjustment wheel	9.	Play / Pause / Scan and memory radio channels
2.	ON/OFF switch	10.	Next MP3 / Channel / Fast - forward
3.	Charging indicator / LED flashlight	11.	MP3/FM selector
4.	DC charging jack	12.	Record key
5.	USB port	13.	Voice record playback
6.	Earphone connector jack	14.	Loop
7.	0 – 9 number buttons	15.	LED flashlight switch
8.	Previous MP3 / Channel / Rewind	16.	TF card slot

OPERATING INSTRUCTIONS

FM RADIO PLAY

- Turn the ON/OFF switch (2) to « ON » position to turn on.
- Short press MP3/FM selector (11) to select FM radio mode if needed. The “FM” icon appears on the display screen.

- Long press the  button until the frequency bands display quickly to auto scan and memory FM channels. The FM radio plays automatically after auto scan and FM channels memory.
- Use the volume adjustment wheel (1) to set the desired sound volume.
- If required, move the telescopic antenna into a different position or move the device to optimise reception of the current station.
- In FM radio mode:
 - Press  button to replay or pause.
 - Press  button for next channel play.
 - Press  button for previous channel play.
 - Number button 0 – 9 can be used to select directly your desired station or scanned FM radio channel.

For example:

1. Continuously press buttons 9+3+9 to select FM station band frequency 93.9.
2. Press button 9 to select the scanned FM channel 9.

MP3/WMA/WAV FILE PLAY

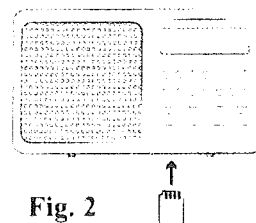





Fig. 2

- Insert your USB or TF card correctly.
- Turn the ON/OFF switch (2) to « ON » position to turn on.
- Short press MP3/FM selector (11) to MP3 mode if needed. The “USB” or “SD” icon will appear on the display screen.

In MP3 mode:

- Number button 0 – 9 can be used to select one specific MP3/WMA/WAV file (for example, continuously press buttons 1+6+8 to select the 168th MP3/WMA/WAV file, but if the quantity of MP3/WMA/WAV file is less than 168, it will continue play the current MP3/WMA/WAV file).
-  button: short press for next MP3/WMA/WAV file play, long press to fast-forward.
-  button: short press for previous MP3/WMA/WAV file play, long press to rewind.
-  button: short press to play or pause.

LED FLASHLIGHT

- Press the LED flashlight switch (15) shortly to turn on the LED flashlight.
- Press it shortly again to turn off.

RECORDING

There are two recording modes: 1. recording outside sound; 2. recording FM radio content.

- Insert your USB or TF card into the device correctly.
 - **For recording FM radio:** short press MP3/FM selector (11) to FM mode if needed. The “FM” icon will appear on the display screen.
 - **For recording outside sound:** Make sure there is a MP3/WMA/WAV file at least for recording outside sound. And please ensure the sound source is near to the radio before outside sound recording.

- Press the record key (12) shortly to start the recording. The “REC” icon appears on the display screen.
- Press the record key (12) shortly again to finish the recording. If there is anything on the display screen, press the record key (12) shortly again one time to enter setting mode, and press it shortly again to finish the recording. The “REC” icon disappears from the display screen and the device plays the recorded file.
- Long press the voice record playback key (13) to delete the current recording.

TROUBLESHOOTING

- Please press the middle of the button with a slight pressure for operating the device.
- Don't insert both USB and TF card into the device at same time.
- When there is not any audio device inserted in, the FM/MP3 selector (11) doesn't work. The device plays only FM radio.
- When there is anything on the LCD screen, you should press any key except LED switch (15) to enter setting mode, and then follow the operating procedures above (Section “OPERATING INSTRUCTIONS”).
- If you would like to read the recorded files with your computer, please open it with your available multimedia player.

BATTERY INSTALLATION AND CHARGING

- Check the battery is installed correctly according to figures shown below.
- When reading USB/TF card intermittently or the “OFF” icon appears on the display screen, indicates that the battery is low and you need to charge the battery by using the USB charge cable.
- Turn the ON/OFF switch (2) to « OFF » position to turn off the device.
- Plug one side of the USB cable into the DC charging jack (4) and another side with the USB jack of your appliance. And please check that your appliance is powered on.
- When charging, the LED charging indicator (3) will light. Otherwise, it means the failure of the battery charging, you should recheck the state of the USB charge cable or if your appliance is powered on.

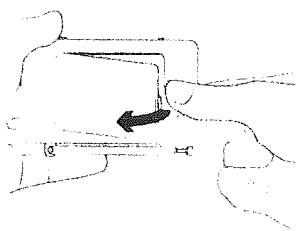


Fig. 3

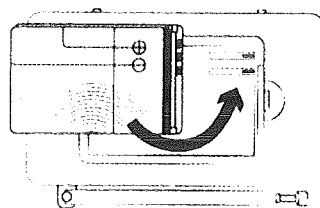


Fig. 4

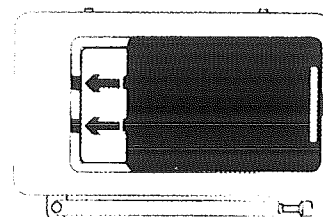


Fig. 5

TECHNICAL SPECIFICATIONS

- Battery type: 1 x BL – 5C rechargeable battery, supplied, 3.7 V \approx 850 mAh
- Frequency band: 87.5 – 108 MHz
- SNR: \geq 80 Db
- Audio format : MP3/WMA/WAV
- Battery charging time : approx. 2 hours for full battery charge
- Autonomy : 2 – 8 hours according to selected volume

PRECISION AND PRECAUTIONS ABOUT THE BATTERY USE

- Throwing away a used battery in the environment or with household waste pollutes and avoids the recuperation of reusable materials.
- It is important to limit the battery consumption and to respect the following rules:
 - Favor alkaline battery (last longer than saline battery) and when it's possible use rechargeable battery.
 - Leave used batteries and accumulators in adapted containers that you can find in some retailers. In that way, metals don't pollute the environment and the health.
- Battery has to be inserted by respecting the polarity show on the apparel and the battery. An incorrect positioning can damage the apparel, cause leaking and even provoke fire and the explosion of the battery.
- To assure a good functioning, battery has to be in a good condition. If there is a problem, put new battery.
- Never try to recharge battery not made for this. It could leak, warm up, cause fire or explode.
- Replace all the battery at the same time. Never mix up alkaline battery with saline battery.
- Used battery has to be removed.
- Also, remove the battery if you're not using the apparel for a long time.
- Never try to short-circuit the terminal of a battery.
- Never throw away the battery in fire because they can explode.
- Take out the accumulator from the apparel before reload it.
- We recommend that an adult watch if a child change the battery to respect those rules.
- If you swallow a battery, go immediately to your doctor or the hospital.



WARNING: You should not dispose of this device with your household waste.

A selective collection system for this type of product is implemented by your local authorities.

Please contact your local authorities to find out how and where collection takes place. These restrictions apply because electrical and electronic devices contain dangerous substances that have harmful effects on the environment or on human health and must be recycled.

This symbol indicates that electrical and electronic devices are collected selectively. The symbol shows a waste container crossed out with an X symbol.

If the power cable is damaged, it must be replaced by the manufacturer, his after sales service, or a person qualified in this area in order to avoid any accidents arising.

Marketed by EUROTUPS VERSAND GMBH D-40764 LANGENFELD