



**INSTRUCTION MANUAL****I. PRODUCT DESCRIPTION**

Front view

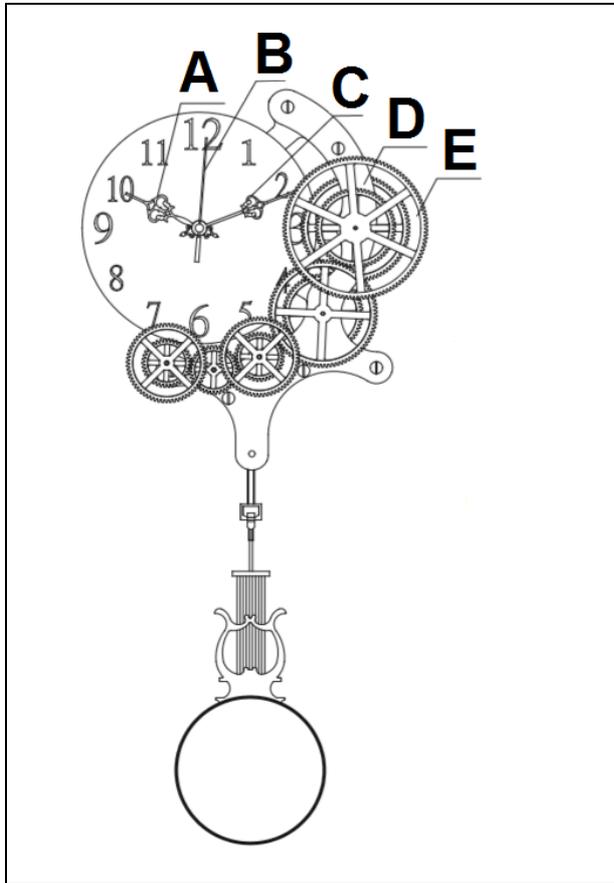

- A. Hour hand**
- B. Second hand**
- C. Minute hand**
- D. Front holder**
- E. Decorative gear**

Back view

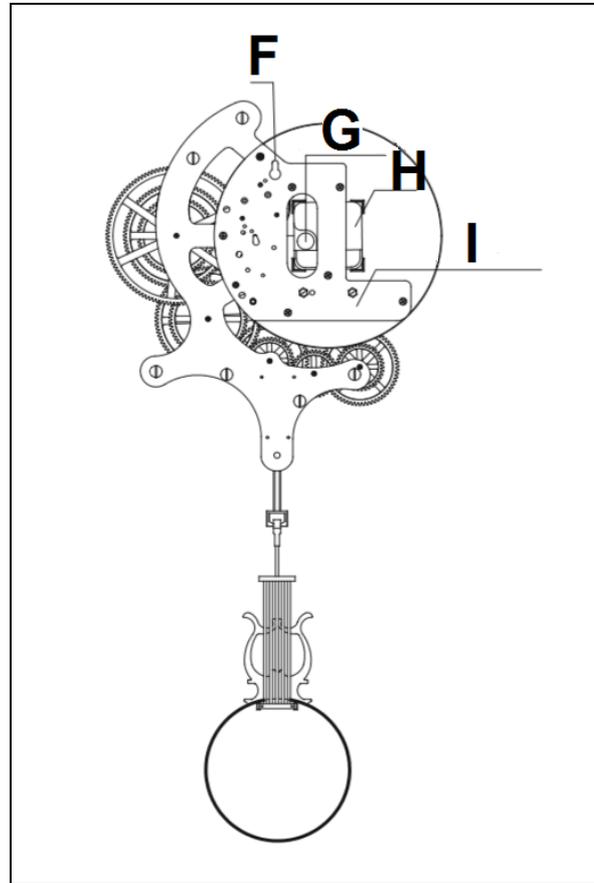

- F. Hook hole**
- G. Adjustment button**
- H. Movement**
- I. Battery compartment**

**This is not a toy. Keep away from children.**

**II. BATTERY INSTALLATION**

Battery required: 2 x C or LR14 batteries not included, 3V (1,5V each).

1. Open the battery cover and insert 2 C or LR14 batteries while observing correct polarity as marked inside the battery compartment.
2. Close the cover according to arrowhead marked.

3. Hang the pendulum to the hole at the back of the clock.



**- Put the clock on a smooth wall, otherwise it will display incorrect time and affect other parts.**

**- DO NOT disassemble the clock. NE DÉMONTÉZ PAS la pendule.**

Note: Please change the batteries every 4 months.

### III. TIME SETTING

Turn the adjustment button in clockwise direction, and set the time

### IV. CLEANING AND MAINTENANCE

- Clean the clock with a feather duster.
- **DO NOT** use abrasive products.

### V. WARNING ON BATTERIES

- Never mix alkaline, standard (carbon-zinc) and rechargeable (nickel hydride).
- Don't mix new and used batteries.
- Don't attempt to recharge non rechargeable batteries.
- Remove rechargeable batteries from the device (if possible) before charging them.
- Rechargeable batteries must always be recharged under adult supervision.
- Remove used batteries.
- Never short the power supply terminals.
- Always use the recommended or equivalent battery types.
- Always pay attention to battery polarity.

**WARNING:** You should not dispose of this device with your household waste. A selective collection system for this type of product is implemented by your local authorities. Please contact your local authorities to find out how and where collection takes place. These restrictions apply because electrical and electronic devices



contain dangerous substances that have harmful effects on the environment or on human health and must be recycled.

— This symbol indicates that electrical and electronic devices are collected selectively. The symbol shows a waste container crossed out with an X symbol.



Marketed by EUROTUPS VERSAND GMBH D-40764 LANGENFELD - Germany