


Universal Battery Charger
Cat. No.: 25297
Instruction Manual

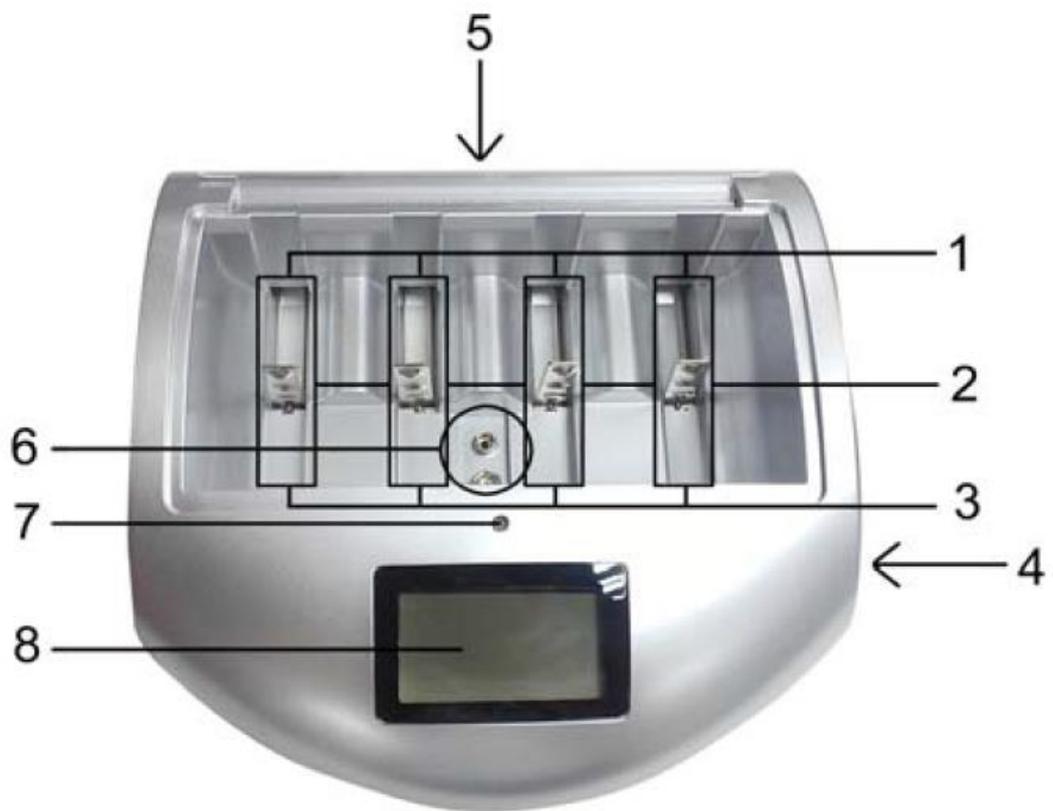

1. “-“POLE
2. BATTERY CHARGER BAYS
- 3.” +” POLE
4. USB OUTLET
5. DC SOCKET
6. 9V CHARGERS
7. POWER LIGHT
8. LCD DISPLAY



1. DESCRIPTION

- Suitable for 1 to 4 AA batteries, AAA, C, D, 9V Alkaline, Li-ion, Ni-Cd / Ni-MH and recharge via USB
- Four individual compartments and one 9V batteries.
- Protection against short circuits for batteries Ni-MH and Ni-Cd during charging.
- The LED and LCD screen shows the progress of the load.
(When charging, a flashing battery with "CHG" will be displayed on the LCD screen; When charging is completed, "OK" will be displayed)
- Automatically detects bad battery (When a battery can't be charged, "BAD" will be indicated on the LCD screen)
- Protection against overload.
- Automatically recognizes the battery type (no need to select the battery type).
- Automatic shut off after 24 hour, just unplug and plug again to re-use it.

Note: This charger does not charge the 3.6V and 9V lithium batteries

2. OPERATION

Read the instructions carefully before using this device.

- Connect the adapter to the device.
- Plug the adapter into the power outlet.
- Insert the batteries into the charger with the correct polarity.
- When you insert batteries Ni-Cd, the machine starts to load when the battery discharge is completed, the battery will charge automatically.
- Ni-MH batteries have no memory effect. The charger will automatically begin charging.
- Alkaline batteries can be regenerated if they are not fully discharged.
- Do not charge Lithium batteries when using the USB port
- Using a USB adaptor (Not included), connect your mobile phone or other electronic device to the USB outlet for charging. (Note: USB charging progress will not displayed on the LCD screen)

3. CHARGE TIMING

The charging time is different depending on the brand and capacity of batteries.

Battery Type	Battery Size	Battery Capacity	Charge Time
Ni-Cd	AAA	400mAh	0.8H
	AA	800mAh	1.8H
	C	2200mAh	4.9H
	D	4400mAh	9.8H
Ni-MH	AAA	800mAh	1.8H
	AA	2300mAh	5.1H
	C	3300mAh	7.3H
	D	5000mAh	11.1H
Alkaline	AAA	1.5V	<1.4V 3.2H
	AA	1.5V	<1.4V 6.1H
	C	1.5V	<1.4V 7.2H
	D	1.5V	<1.4V 12H
	9-V Block	200mAh	7H
Lithium	10440	3.7V/400mAh	1.5H
	14500	3.7V/1200mAh	3.5H
	18490	3.7V/1400mAh	4H
	18650	3.7V/2200mAh	8H
	26500	3.7V/3500mAh	12.7H
	34615	3.7V/4500mAh	16.4H
	17500	3.7V/1400mAh	5.1H
	26650	3.7V/4000mAh	14.5H
	17670	3.7V/1800mAh	6.5H
	17335	3.7V/1200mAh	3.5H
	16340	3.7V/800mAh	2.9H

4. IMPORTANT SAFETY INSTRUCTION

Before you use this product, please pay attention to the user's manual and the safety instructions listed below.

- Never use the unit outdoors; it is designed only for indoor use
- This charger is only suitable for the Ni-Cd (Nickel Cadmium) batteries and the Ni-MH (Nickel Metal Hydride) batteries and Alkaline, and 3.7V Lithium battery
- Do not attempt to charge damaged, expired, leaking, corroded, or rusted batteries. Always inspect batteries before insertion.
- Don't use extension cord for connection of the unit.
- Pay attention to the correct polarity during inserting the accumulators.
- Use the unit only at ambient temperatures of 0-40°C.
- Always draw the main plug out of the socket after each use and before cleaning.
- Protect the charger against humidity and heat.
- Never open the unit by yourself; otherwise the warranty will become invalid! Repair can be carried out only by our service branch or an authorized distributor. Faults on montage can cause fires or electric shocks.
- Do not use damaged or corroded accumulators.
- AAA batteries with a capacity of 300 mAh can never be charged for more than 0.5 hours.
- Never connect other electric units or devices with a damaged main together.
- If the connection cord of this unit is damaged, it must be replaced by the manufacturer, its service person or a similar qualified person, in order to avoid danger.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capacities, or by persons lacking in experience or knowledge, unless they are supervised or instructed on the use of this apparatus by a person responsible for their safety. Children should be supervised to ensure they do not play with this appliance.

DISPOSAL:

The packaging material is reusable. Dispose of the packaging in an environmentally friendly way by putting it in the appropriate recyclable waste collection containers.



Dispose of the product and the batteries in view of the environment if you want to separate. The device and the batteries must not be thrown in with domestic waste. Take them to a recycling center for used electrical and electronic devices. For more information you can consult your local government. Remove batteries first.

Elisabeth-Selbert-Straße 3
40764 Langenfeld, Germany

If technical support is needed, please call ...

in Germany 0180 . 530 63 63* or info@eurotops.de

in Austria 01 . 230 60 43 12 or info@eurotops.at

in Switzerland 044 . 28 36 125 or info@eurotops.ch

in the Netherlands 026 . 37 36 333 or info@eurotops.nl

in France 0892 . 700 470** or info@eurotops.fr

* 14 Cents/minute via German landline, max. 42 cents/minute via mobile phone network

**34 Cents/minute via French landline

A possible return of products should be addressed to the return address stated on your invoice.

The manual only reflects the technical conditions available under printing. Any changes in technology and equipment are reserved.

© 12.10.2014