


Wooden Radio-Controlled Clock with Temperature Indicator
Cat. No.: 25993
Instruction Manual

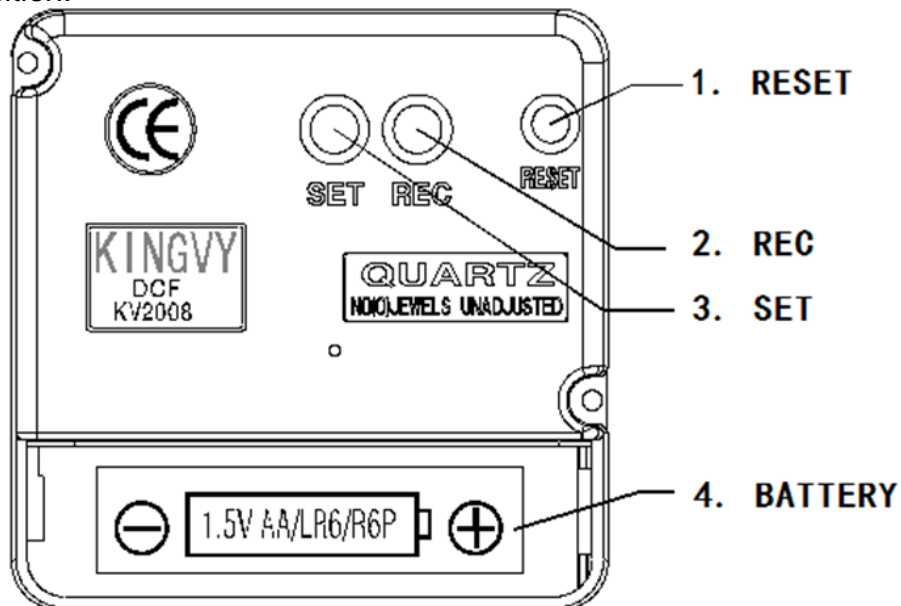

1. START

- Insert a battery (LR6, 1.5 V, Type AA, not included) in the correct polarities as indicated in the battery compartment.
- The clock will start initializing procedure and adjusting the hands to 12:00 (or 4:00, 8:00) position.



2. SETTING THE CLOCK AUTOMATICALLY

- After installing the battery, the clock automatically sets itself to 12:00 (or 4:00,8:00) position and then starts to receive the radio signal
- It will take maximum 8 minutes to receive the signal
- Once it has received the radio signal successfully, the clock will show the correct time.
(Note: Do not move the clock during this process)
- If the clock still has not set itself after 8 minutes, the signal reception is faulty or weak at the chosen location. Move to a different location and press RESET button to repeat the signal receiving.
(After pressing the RESET, the clock will reset the clock data. The hour, minutes and second hands will move to 12:00 position and start to receive the radio signal)
- For initial use, if the signal is too weak and the clock is unable to receive the signal, the clock will start searching for the radio signal every hour.
- For normal use, the clock will automatically receive the radio signal 3-8 times every day: If the signal is strong, receiving will occur at 2:00, 3 :00 and 14 :00 (3 times in total). If the signal is weak, the clock will search for the radio signal at most 8 times (2:00, 3:00, 4:00, 5:00 and 14:00,15:00, 16:00 17:00). It will take 3-8 minutes to receive the radio signal every time.

3. MANUAL SETTING:


- Press and hold the 'SET' button for 4 seconds to set the time.
- Press the 'SET' button for 1 second to advance 1 minute.
- Press the 'SET' button for more than 1 second to auto advance the minute hand.
- If the 'SET' button is not pressed within 8 seconds, the clock will quit the set mode and return to normal mode and then go on working automatically.

4. FORCE RADIO SIGNAL RECEPTION

- During normal operation, pressing the REC button for 4 seconds will force reception of the radio signal.
- The clock will start the initializing procedure and adjusting the hands to 12 :00 (or 4:00,8:00) position to receive the radio signal
- It will take about 3-8 minutes
- Once it has received the radio signal successfully, the clock will show the correct time.
(Note: Do not move the clock during this process)
- If the time still has not set itself after 8 minutes, reception has been disrupted and it will resume using the designated time before failed.

5. LCD DISPLAY

Once the signal is received successfully, the LCD will shift to display the correct day (D) and temperature (°C) every 20 seconds.

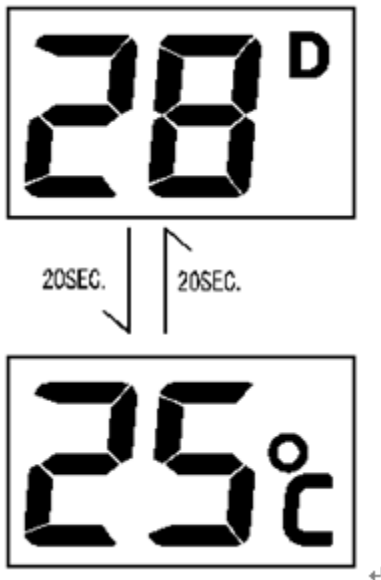

6. DISPOSAL:

The packaging material is reusable. Dispose of the packaging in an environmentally friendly way by putting it in the appropriate recyclable waste collection containers.



Dispose of the product and the batteries in view of the environment if you want to separate. The device and the batteries must not be thrown in with domestic waste. Take them to a recycling center for used electrical and electronic devices. For more information you can consult your local government. Remove batteries first.

Eurotops Versand GmbH
Elisabeth-Selbert-Straße 3
40764 Langenfeld, Germany



If technical support is needed, please call ...

in Germany 0180 . 530 63 63* or info@eurotops.de

in Austria 01 . 230 60 43 12 or info@eurotops.at

in Switzerland 044 . 28 36 125 or info@eurotops.ch

in the Netherlands 026 . 37 36 333 or info@eurotops.nl

in France 0892 . 700 470** or info@eurotops.fr

* 14 Cents/minute via German landline, max. 42 cents/minute via mobile phone network

**34 Cents/minute via French landline

A possible return of products should be addressed to the return address stated on your invoice.

The manual only reflects the technical conditions available under printing. Any changes in technology and equipment are reserved.