

# HIFI RADIO WITH CLOCK

## INSTRUCTION MANUAL

Art. No.: 26476

### Description:

1. LCD screen
2. MODE button
3. SET button
4. LIGHT button
5. ON/OFF button
6. UP button
7. DOWN button
8. VOL+ button
9. VOL- button
10. Whip antenna
11. Battery compartment



### Battery installation:

- Open the battery compartment (11) on the back of the device.
- Insert 3 AAA 1.5V batteries and observing battery polarity.
- Close the compartment.

### Setting the date and time:

- Press the SET button (3) four times. The month is displayed.
- Press the MODE button (2) to set the month.
- Press the SET button (3) to confirm. The day is displayed.
- Press the MODE button (2) to set the day.
- Press the SET button (3) to confirm. The clock time is displayed.
- Press the MODE button (2) to set the clock time. Important: if the clock is set to 12 hr format, the digit representing the hour will be followed by an A for morning hours or a P for afternoon and evening hours. If the clock is set to 24 hr format, the digit representing the hour will be followed by an H. By advancing the hours you can switch from one format to another.
- Press the SET button (3) to confirm. The clock minutes are displayed.
- Press the MODE button (2) to set the clock minutes.
- Press the SET button (3) followed by the MODE (2) button to confirm.

### Setting the alarm:

- Press the SET button (3). The alarm wake hour will flash.
- Press the MODE button (2) to enable/disable alarm mode or the chime signal:
  - The ☹ icon displayed on the LCD screen (1) indicates that the alarm is enabled.
  - The 🔔 icon displayed on the LCD screen (1) indicates that the chime signal is enabled (a signal will every hour).
- Press the SET button (3) to confirm. The alarm wake hour will flash.
- Press the MODE button (2) to set the alarm wake hour. Important: if the clock is set to 12 hr format, the digit representing the hour will be followed by an A for morning hours

or a P for afternoon and evening hours. If the clock is set to 24 hr format, the digit representing the hour will be followed by an H. **(For example if the present setting of the alarm 12/24 format is 12hr format, you cannot change the format to 24 hr format. The only way is go back to clock setting to do the setting first.)**

- Press the SET button (3) to confirm. The alarm wake minutes will flash.
- Press the MODE button (2) to select the required minutes.
- Press the SET button (3) to confirm.
- When the alarm sounds, press the SET (3) button to turn off the alarm or the MODE (2) button to snooze for 5 minutes.

### **Display mode:**

- By default, the display mode shows the clock time. IMPORTANT: if you see PM displayed in the upper left corner of the screen (1) it means that it's afternoon (in 12 hr mode).
- Press the MODE button (2) once to display the alarm wake hour.
- Press the MODE button (2) a second time to display the date.
- Press the MODE button (2) a third time to display the seconds.
- Press the MODE button (2) a fourth time to return to the clock time.
- Press the LIGHT button (4) to turn on the backlight. It switches off automatically after a few seconds.

### **Using the FM radio:**

- Press and hold the ON/OFF (5) button for a few seconds to switch on the radio.
- Press the UP (6) or DOWN (7) buttons to change the station/frequency. **TIP:** extend the whip antenna (10) for better reception.
- Press the VOL+ (8) button to turn up the volume and the VOL- (9) button to turn down the volume.
- Press and hold the ON/OFF button (5) for a few seconds to switch off the radio.

### **DISPOSAL:**

The packaging material is reusable. Dispose of the packaging in an environmentally friendly way by putting it in the appropriate recyclable waste collection containers.



Dispose of the product and the batteries in view of the environment if you want to separate. The device and the batteries must not be thrown in with domestic waste. Take them to a recycling center for used electrical and electronic

██████ devices. For more information you can consult your local government. Remove batteries first.

Eurotops Versand GmbH  
Elisabeth-Selbert-Straße 3  
40764 Langenfeld, Germany



If technical support is needed, please call ...

in Germany	0180 . 530 63 63* or <a href="mailto:info@eurotops.de">info@eurotops.de</a>
in Austria	01 . 230 60 43 12 or <a href="mailto:info@eurotops.at">info@eurotops.at</a>
in Switzerland	044 . 28 36 125 or <a href="mailto:info@eurotops.ch">info@eurotops.ch</a>
in the Netherlands	026 . 37 36 333 or <a href="mailto:info@eurotops.nl">info@eurotops.nl</a>
in France	0892 . 700 470** or <a href="mailto:info@eurotops.fr">info@eurotops.fr</a>

\* 14 Cents/minute via German landline, max. 42 cents/minute via mobile phone network

\*\*34 Cents/minute via French landline

A possible return of products should be addressed to the return address stated on your invoice.

The manual only reflects the technical conditions available under printing. Any changes in technology and equipment are reserved.

© 08.05.2015