

# MULTIFUNCTIONAL WATCH

## Art.nr. 27545

### INSTRUCTION MANUAL



**Back light:** Press the A button to turn on the LED light for about 3 seconds.

#### **Stopwatch mode:**

In normal time mode, press B button once to enter the stopwatch mode, press the C button once to start the timer, press the C button twice to stop timing. Press the D button to reset the stopwatch. Press B button once to return to normal time mode.

#### **Alarm, snooze, hourly chime switch:**

In normal time mode, press B button twice to enter the alarm mode, press the C button to turn on or off the alarm and hourly chime.

When the alarm beeping, press the B button once to enter snooze mode. After several minutes, when it beeps again, press the B button once to enter snooze mode still. Press the C button to turn off the snooze mode.

#### **Alarm Mode:**

In normal time mode, press B button twice to enter the alarm mode, press D button once, hours flashing. Press D button twice, minutes flashing. Press C button to adjust values of the hours and minutes. Press B button once to return to normal time mode.


#### **Time settings:**

In normal time mode, press B button three times to enter the time setting, meanwhile seconds flashing. Press D button: hour, minute, month, date, day will be flashing in turn. Press the C button to adjust. Press B button once to return to normal time mode.

#### **Remarks :**

12/24-hour mode can be set when setting the hours.

#### **To change the battery of the LCD display:**

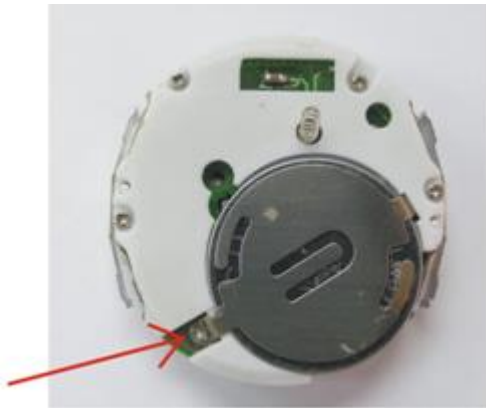

- 1) Remove the case back
- 2) Unscrew 1 screw as shown
- 3) Replace the old battery with new battery. Battery type is CR2016
- 4) Screw back and fix back the case back

### To change the battery of the analogue watch:



- 1) Remove case back
- 2) Unscrew the 5 screws as shown
- 3) Replace old battery with new battery. Battery type is SR626 or 377
- 4) Screw back the 5 screws and fix back the case back.

### DISPOSAL:

The packaging material is reusable. Dispose of the packaging in an environmentally friendly way by putting it in the appropriate recyclable waste collection containers.



Dispose of the product and the batteries in view of the environment if you want to separate. The device and the batteries must not be thrown in with domestic waste. Take them to a recycling center for used electrical and electronic devices. For more information you can consult your local government. Remove batteries first.

Eurotops Versand GmbH  
 Elisabeth-Selbert-Straße 3  
 40764 Langenfeld, Germany



If technical support is needed, please call ...  
 in Germany 0180 . 530 63 63\* or [info@eurotops.de](mailto:info@eurotops.de)  
 in Austria 01 . 230 60 43 12 or [info@eurotops.at](mailto:info@eurotops.at)  
 in Switzerland 044 . 28 36 125 or [info@eurotops.ch](mailto:info@eurotops.ch)  
 in the Netherlands 026 . 37 36 333 or [info@eurotops.nl](mailto:info@eurotops.nl)  
 in France 0892 . 700 470\*\* or [info@eurotops.fr](mailto:info@eurotops.fr)

\* 14 Cents/minute via German landline, max. 42 cents/minute via mobile phone network

\*\*34 Cents/minute via French landline

A possible return of products should be addressed to the return address stated on your invoice.

The manual only reflects the technical conditions available under printing. Any changes in technology and equipment are reserved.

© 03.02.2016