

I. USE

Adjusting date

1. Unscrew the crown counterclockwise to get it out. Refer to fig 1.
2. Pull the crown out gently to the date adjusting position. Refer to fig 2.
3. Set the watch for the correct date by turning the crown clockwise.

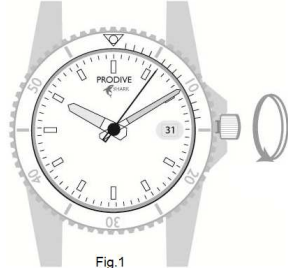


Fig.1



Fig.2

Adjusting time

1. After setting the date, pull the crown out again to the time adjustment position. Refer to fig 3.
2. Set the watch for the correct time by turning the crown.
3. Press the crown in to the normal position to confirm the setting.
4. Press again the crown against the case and screw it tightly to guarantee the waterproofing.

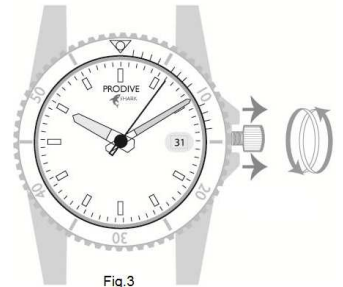


Fig.3

Note : Screw tightly the crown against the case to ensure the waterproof seal.

II. FEATURES

- 1 button cell, type : SR626SW, 1.55V
- 10 ATM/100M

III. WARNING

- To ensure a waterproof seal, always make sure that the crown has been pushed back into the normal operating position.
- DO NOT USE the crown or any other buttons underwater or when the watch is wet.
- To maintain the aesthetic appearance of your watch, avoid contact with perfumes, nail polish, varnish, cosmetics, cleaning products, adhesives, and paint, as they can cause discoloration, deterioration and damage.
- To prevent any risk from perspiration, dust and humidity, regularly wipe your watch with a soft, dry cloth.
- To ensure the longevity of your watch, please observe the following instructions: Do not attempt to open the watch casing. The battery must be replaced by a qualified person.
- Your watch is shock-resistant. However, to avoid damage, make sure you do not drop or hit it against hard surfaces.

WARNING: You should not dispose of this device with your household waste. A selective collection system for this type of product is implemented by your local authorities. Please contact your local authorities to find out how and where collection takes place. These restrictions apply because electrical and electronic devices contain dangerous substances that have harmful effects on the environment or on human health and must be recycled.



This symbol indicates that electrical and electronic devices are collected selectively. The symbol shows a waste container crossed out with an X symbol.

