



Before recording: Please move the button to the position "ON", and wait for approx. ten seconds before starting a recording.

Turn off: After finishing recording, wait 5 seconds before turning off because firmware (software of USB flash drive) needs time to run. After 5 seconds, push the button to the left, and then it will stop recording.

Play: After recording, connect it to the computer to play (format: WAVE).

If the USB key recommends any change to system parameters, please click on "No".

Male jack: USB 2.0 (USB2.0 interface, support win98 or above, no need for the driver, it can be used as a USB key).

Notes:

- If the battery is too low, the pilot lamp will flash fast.
- When charging, the light flashing is normal.
- After charging, the pilot lamp flashes no longer.
- It can be used for more that 5 hours after one charging.
- 4GB.



WARNING: You should not dispose of this device with your household waste. A selective collection system for this type of product is implemented by your local authorities. Please contact your local authorities to find out how and where collection takes place. These restrictions apply because electrical and electronic devices contain dangerous substances that have harmful effects on the environment or on human health and must be recycled.

This symbol indicates that electrical and electronic devices are collected selectively. The symbol shows a waste container crossed out with an X symbol.

Imported by PRODIS SAS, 1 rue de Rome, 93110 Rosny-sous-Bois, France
Marketed by EUROTOPS VERSAND GMBH D-40764 LANGENFELD, Germany
Made in PRC

