

P490/ GLL01-S

OUTDOOR LED SPOTLIGHT "SNOWFLAKES"



INSTRUCTION MANUAL

Read these instructions thoroughly before using and installing the product for the first time, and keep them for future reference. Should you give this device to another person, it is vital that you also pass on these instructions for use.

I. SAFETY INSTRUCTIONS

1. Only use the projection LED spotlight for the purposes indicated in the instruction manuals.
2. It is intended to be used outdoors.
3. This LED spotlight is not suitable for general lighting. It is used to create mood lighting through the animation of its visual patterns.
4. Before connecting the appliance to the power supply, ensure that the voltage indicated on the rating label matches that of the power supply.
5. Always connect your appliance to an easily accessible socket.
6. Be careful not to trap or damage the power cable.
7. Regularly check the LED spotlight and power cable.
8. When disconnecting the power cable, always pull it at the plug, do not pull on the cable.
9. Do not move the LED spotlight when plugged into the socket or when using it.
10. The LED spot should not be put into operation immediately after transporting it from a cold place to a warm place. To avoid the formation of condensation inside the LED spotlight, wait for a few minutes to let it adapt to the ambient temperature and then plug it
11. Never handle the live LED spotlight and live parts with wet hands!
12. Always ensure there is enough space around the appliance when it is plugged in and functioning.
13. Never cover the LED spotlight.
14. Avoid wrapping the cord around the appliance and do not bend it.
15. Never immerse the LED spotlight, power cable or plug in water or any other liquid.
16. Do not hold the appliance or cable with wet hands.
17. Avoid all shocks and violent falls of LED spotlight.
18. Do not use the appliance:
 - if the plug or power cable is damaged,
 - if the appliance has been damaged in any way,
 - if it has fallen and is cracked.
19. Do not open, modify, disassemble or puncture the LED spotlight.
20. Never attempt to repair the appliance yourself. If it is damaged, it must be repaired by a qualified technician or a specialized workshop to avoid any danger.
21. If the appliance is damaged, it must be repaired by the manufacturer or by a similarly qualified person to avoid any danger.
22. **This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.**

II. PRODUCT DESCRIPTION

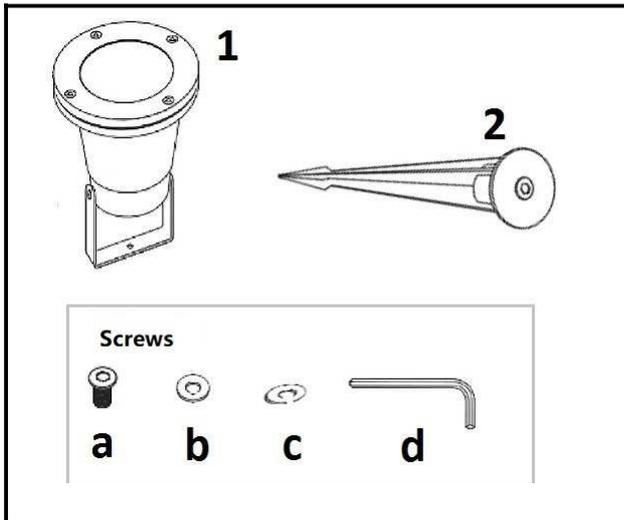


FIG. 1

III. TECHNICAL CHARACTERISTICS

Adapter

- Input: 100-240V \sim 50/60Hz 0.2A
- Output: 12V --- 0.3A 3.6W MAX MAX. 13.0V
- Adapter - Ingress protection rating : IP44


Projection LED Spotlight

- Projection range : up to 15 meters
- Degree of protection: IP65 (protection against dust and splashing water)
- LED: 4 LEDs x 1W

IV. INSTALLATION INSTRUCTIONS

IMPORTANT INSTRUCTIONS TO READ BEFORE ASSEMBLY AND INSTALLATION:

- DO NOT INSTALL THE SPOTLIGHT IF IT IS CONNECTED TO THE POWER SUPPLY. THE PLUG SHOULD NOT BE CONNECTED DURING INSTALLATION.
- BEFORE INSTALLING THE SPOTLIGHT, REMOVE THE SCREW, WASHER AND SPRING WASHER ON TOP OF STAKE.
- PLACE THE PROJECTION LED SPOTLIGHT AND THE POWER CABLE SO THAT THEY WILL NOT CAUSE ANY OBSTACLE OR BLOCK THE PASSAGE.
- HANDLE THE LED SPOTLIGHT PROJECTOR CAREFULLY.
- DO NOT PUT AND INSTALL THE LED SPOTLIGHT NEAR A DIRECT HEATING SOURCE (e.g. barbecue).
- WHEN CHOOSING THE PLACE TO INSTALL IT, AVOID DUSTY LOCATIONS, EXPOSED TO THE DIRECT SUNLIGHT OR TOO HOT.

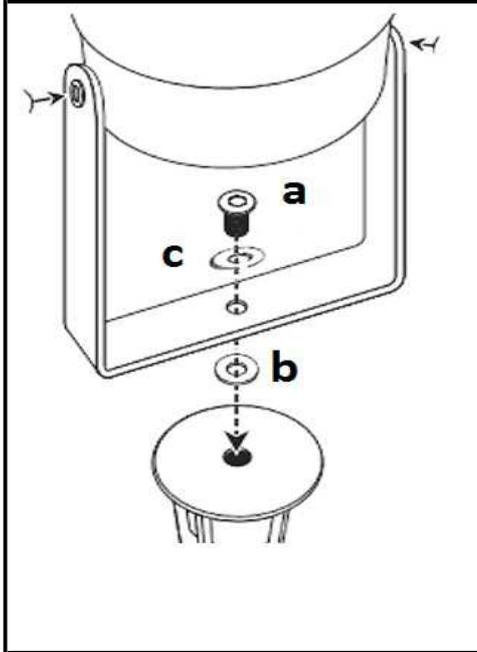

1. First unscrew the hexagonal socket head screw, which is screwed above the stake, with the Hexagonal key. Remove this screw and the washers.
2. Insert the spring washer (c) into the hexagonal socket head screw (a).
3. Insert the spring washer and the hexagonal socket head screw into the adjustable arm of the LED spotlight (see figure 2).
4. Once inserted, put the washer (b) inside the screw.
5. Then insert the screw inside the hole of the stake and start to screw by turning the stake manually.

Note: If the screw is not tight, use the hexagonal key. To do this, put the stake in vertical position and turn the LED spotlight slightly upwards so as to insert the end of the key into the cylindrical head of the screw. Then once the key is fully inserted, turn the stake manually until the stake locks. **FIG. 2**

V. INSTALLATION OF PROJECTION LED SPOTLIGHT


- After mounting the LED spotlight, choose the installation for location and plant the stake in the ground while ensuring it can project the snowflake pattern to the desired location: the front of the house, a hedge, a garden wall, etc.

Note :

- If the chosen location does not suit you, you can change the place of the spotlight wherever you

Once the location is determined, change the orientation of the projection according to the expected projection angle. You can slightly screw again or unscrew the side-mounted screws of the spotlight with the hexagonal key.

- After installing the LED spotlight, connect the cord to the adapter socket as follows:
 1. To connect the cord to the adapter socket, ensure that the arrow on the cord and the rating label on the adapter socket face upwards.
 2. Then insert the end of the cord into the adapter socket as shown in the drawing opposite.

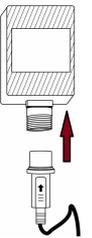

After connecting the LED spotlight and when using the LED spotlight, please observe the safety instructions below.:

- **NEVER LOOK DIRECTLY AND STARE AT THE LIGHT SOURCE!**
- **DO NOT DIRECT THE LIGHT BEAM DIRECTLY INTO EYES OR TO PEOPLE AND ANIMALS.**
- **PEOPLE WHO ARE LIABLE TO EPILEPTIC SEIZURES OR LOSS OF CONSCIOUSNESS WHEN VIEWING CERTAIN TYPES OF LIGHT STIMULI MUST AVOID STARING AT THE VISUAL PATTERN PROJECTED BY THE LED SPOTLIGHT. IF YOU FEEL THE FOLLOWING SYMPTOMS: DIZZINESS, EYE DISORDERS, PROLONGED AND INVOLUNTARY MUSCLE, OCULAR CONTRACTIONS OR CONVULSIONS, PLEASE IMMEDIATELY TURN YOUR EYE AWAY FROM THE PATTERNS, TURN OFF THE LED SPOTLIGHT IMMEDIATELY OR LEAVE THE PLACE WHERE THEY ARE PROJECTED.**

VI. CLEANING AND MAINTENANCE



- Before cleaning, unplug the power cord from the electrical socket.
- Never immerse the LED spotlight, its power cord and its plug in water or any other liquid.

- Clean the surface of the LED spotlight and the lens with a soft, dry and lint-free cloth.
- For more stubborn stains on the surface of LED spotlight, use a sponge slightly moistened with water and a mild detergent. Then dry carefully with a soft, clean cloth before reconnecting it to the socket.

WARNING: You should not dispose of this device with your household waste. A selective collection system for this type of product is implemented by your local authorities. Please contact your local authorities to find out how and where collection takes place. These restrictions apply because electrical and electronic devices contain dangerous substances that have harmful effects on the environment or on human health and must be recycled. This symbol indicates that electrical and electronic devices are collected selectively. The symbol shows a waste container crossed out with an X symbol.

If the power cable is damaged, it must be replaced by the manufacturer, his after sales service, or a person qualified in this area in order to avoid any accidents arising.

Imported by PRODIS SAS, 1 rue de Rome, 93110 Rosny-sous-Bois, France/ Made in the P.R.C.

Marketed by EUROtops Versand GmbH, Elisabeth-Selbert-Str. 3
D-40764, LANGENFELD, GERMANY

