

# ELECTRIC KETTLE IN CERAMIC



## INSTRUCTION MANUAL

220-240V~ 50/60Hz, 1850W-2200W

**This appliance can be used by children aged from 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.**

**Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.**

**Keep the appliance and its cord out of reach of children aged less than 8 years.**

**Children shall not play with the appliance.**


**The appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.**

**Please read this instruction manual before using the device for the first time and keep it for further reference.**

## **I. SAFETY INSTRUCTIONS**

- This appliance is only intended for home use.
- Before connecting the kettle, check that the supply voltage indicated on the rating plate of the appliance matches that of your installation
- Only connect the appliance to a grounded socket.
- If the power cord is damaged, it must be replaced by the manufacturer, its after-sales service or similarly qualified persons to avoid any danger. Check the power cord regularly
- Do not operate the appliance if the power cord or plug shows signs of failure, if the appliance has fallen to the floor, or was damaged by other means. If this is the case, ask a technician to inspect the appliance and to repair if necessary.
- Check that the power cord does not hang near a table or worktop to prevent a fall.
- Protect the kettle and cable from sources of heat, direct exposure to sunlight, moisture, and sharp edges.
- Ensure to put the kettle and its base on a hot surface such as a hotplate. Do not use near an open flame.
- Do not use the kettle when your hands are wet, or feet are bare.
- Disconnect the plug from the socket when not using the kettle, when cleaning it or in case of malfunction.
- Ensure to turn off the appliance first and then remove the plug, not the cord.
- If the appliance gets wet, immediately remove the plug from the socket.
- The kettle must only be used with the lid locked and its proper base.
- Ensure to close the lid correctly before turning on the power.
- DO NOT use the kettle to heat anything other than water.
- DO NOT turn the kettle on if it does not contain water.
- DO NOT leave the kettle unattended during warming.
- DO NOT OPEN immediately after boiling, the steam coming out of the kettle is very hot and can burn you.
- DO NOT DISASSEMBLE the bottom of the kettle body or base to avoid risks of fire and electric shock hazards

## II. PRODUCT DESCRIPTION

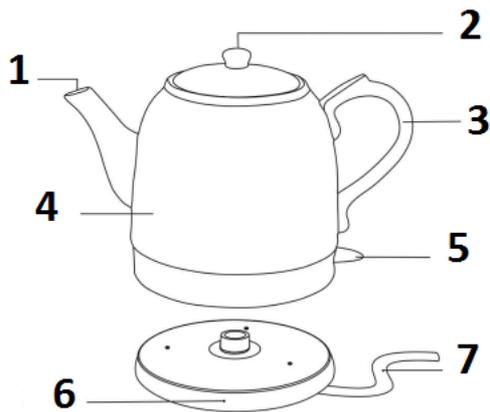

1. Spout
2. Lid
3. Handle
4. Kettle body
5. ON / OFF switch
6. Base
7. Power cord and plug

Volume: 1 L

## III. BEFORE FIRST USE



Fill the kettle with cold water up to the "MAX" level (indicated inside the kettle) and make it boiling. Then, empty the kettle and repeat these operations again before using.

Note: Ensure to rinse the kettle well before use.

## IV. USE INSTRUCTIONS

### A. Filling

1. Take off the kettle from the base.
2. Open the lid. To do this, proceed as below:

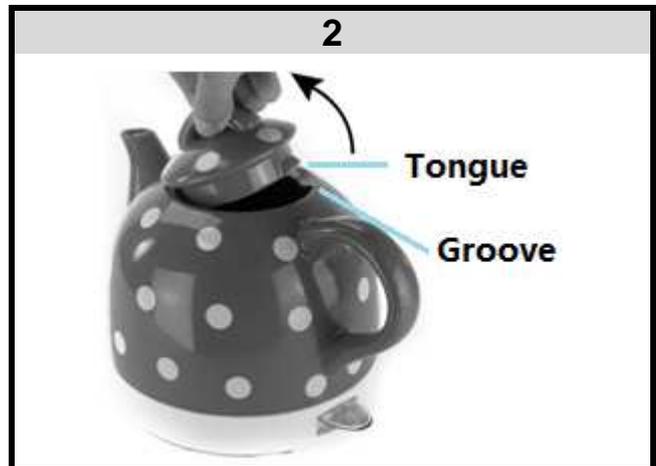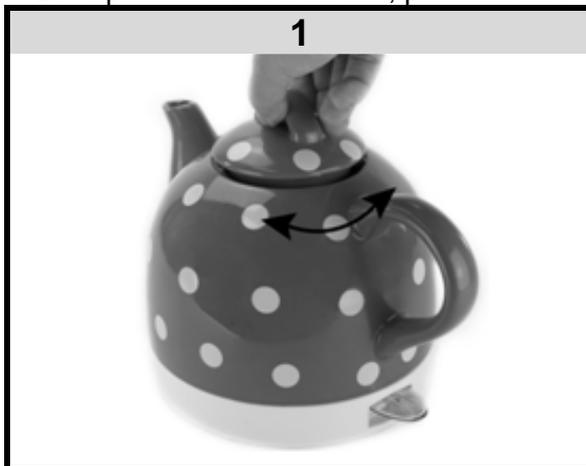

Turn the lid in one direction or the other, lifting it lightly to let the tongue on the edge of the lid comes out of the groove on the inside edge of the kettle.



Note: The kettle lid has two tongues opposite each other.

1. Fill the kettle

**Do not exceed the "MAX" level. If the kettle is overfilled, boiling water may overflow from the spout.**



2. Close the lid. Proceed as below:

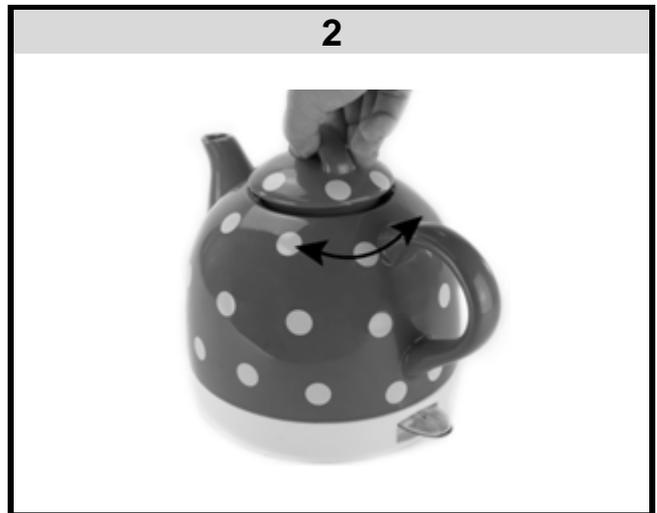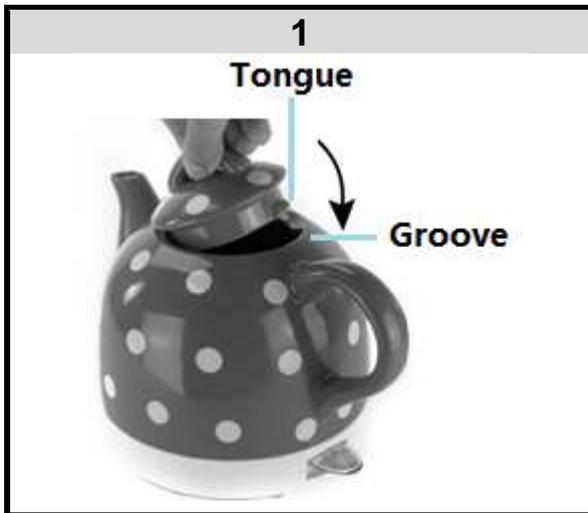

Put the lid and tilt it lightly down so that one tongue can be inserted under the inside edge of the kettle and the other can fit into the groove located at the top edge of the kettle opening. Turn the lid to lock it.



### **WARNING!**

**Never use the kettle without the lid - Risk of burning by boiling water!**

3. Before putting back the kettle on the base, wipe the body of the kettle if it is wet, and check that the kettle is not in "I" position (on / off switch downwards).
4. Put the base on a stable, dry and level surface. Then put the kettle on it

### **B. POWER ON**

After putting the kettle on the base, connect the plug and press on the switch located under the handle to make it under the "I" position. The kettle then starts working.



**WARNING! When using the appliance, the temperature of surface could be very high. The lid and the steams coming out from the kettle are very hot: risk of burns!  
Do not open the lid when the water boils.**

### **C. POWER OFF**

Once the water has boiled, the kettle stops automatically.  
Take off the kettle from the heating base.

### **D. POWER ON AGAIN**

After boiling, allow the kettle to cool down for 15 minutes before refilling again with cold water.

## **V. MAINTENANCE AND CLEANING**

**DO NOT PUT KETTLE, BASE, ELECTRICAL CORD OR PLUG IN WATER OR ANY OTHER LIQUID.**

- Always unplug the power cord from the electrical socket and let the kettle cool down before cleaning.
- Empty the remaining water after each use and rinse the inside.
- Clean the inside of the kettle with a mild dishwashing liquid, then rinse it well with clean water.

- Clean the outside of the kettle and the base with a soft, damp cloth, then dry them with a clean, dry cloth.
- **Do not use steel wools or abrasive detergents to clean the kettle**
- If necessary, use an anti-scale product for kettles to descale.

## VI. STORAGE

Wrap the power cord under the base, which is equipped with a storage compartment.



**WARNING:** You should not dispose of this device with your household waste. A selective collection system for this type of product is implemented by your local authorities. Please contact your local authorities to find out how and where collection takes place. These restrictions apply because electrical and electronic devices contain dangerous substances that have harmful effects on the environment or on human health and must be recycled. This symbol indicates that electrical and electronic devices are collected selectively. The symbol shows a waste container crossed out with an X symbol.

If the power cable is damaged, it must be replaced by the manufacturer, his after sales service, or a person qualified in this area in order to avoid any accidents arising.

Imported by PRODIS SAS, 1 rue de Rome, 93110 Rosny-sous-Bois, France  
 Marketed by EUROtops Versand GmbH, Elisabeth-Selbert-Str. 3  
 D-40764, LANGENFELD, GERMANY  
 Made in the P.R.C

