


INSTRUCTION SHEET

PARTS LIST

- A. Battery Compartment Cover
- B. Battery Compartment
- C. Time Setting Dial
- D. Music Winder

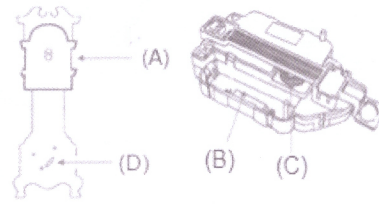

OPERATION

Setting the Time:


1. Open the cover (A) at the back of the pendulum by pulling the small plug in the middle.
2. Insert 1 piece of new AA 1.5V battery (not included), following the polarity indicated.
The pendulum will then start automatically.
Caution: inserting battery incorrectly will affect normal operation and may damage the clock.
3. Turn the dial (C) to set the time.
4. Once the time has been set, close the compartment cover.

Music Function:

1. Turn the crown (D) on the back of the music box clockwise.
Caution: do not wind up the music box with force as it will damage the mechanism.
2. Pull the first drawer open to activate the music.
Close to stop.

Assembly:

1. Take out the 3 decorations from the drawer, insert to the slot on the top part of the clock.
2. The Antique Music Clock is ready!

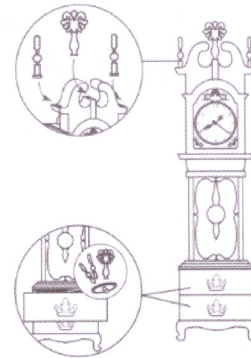

Remarks:

Please remove the cardboard from the pendulum before use.