

WQ170 QUARTZ CLOCK

Instructions manual

Precautions

- This main unit is intended to be used only indoors.
- Do not subject the unit to excessive force or shock.
- Do not expose the unit to extreme temperatures, direct sunlight, dust or humidity.
- Do not immerse in water.
- Avoid contact with any corrosive materials.
- Do not dispose this unit in a fire as it may explode.
- Do not open the inner back case or tamper with any components of this unit.

Batteries safety warnings

- Use only alkaline batteries, not rechargeable batteries.
- Install batteries correctly by matching the polarities (+/-).
- Always replace a complete set of batteries.
- Never mix used and new batteries.
- Remove exhausted batteries immediately.
- Remove batteries when not in use.
- Do not recharge and do not dispose of batteries in fire as the batteries may explode.
- Ensure batteries are stored away from metal objects as contact may cause a short circuit.
- Avoid exposing batteries to extreme temperature or humidity or direct sunlight.
- Keep all batteries out of reach from children. They are a choking hazard.

Use the product only for its intended purpose!

Consideration of duty according to the battery law




Old batteries do not belong to domestic waste because they could cause damages of health and environment. You can return used batteries free of charge to your dealer and collection points. As end-user you are committed by law to bring back needed batteries to distributors and other collecting points!


Consideration of duty according to the law of electrical devices



This symbol means that you must dispose of electrical devices separated from the General household waste when it reaches the end of its useful life. Take your unit to your local waste collection point or recycling centre. This applies to all countries of the European Union, and to other European countries with a separate waste collection system.

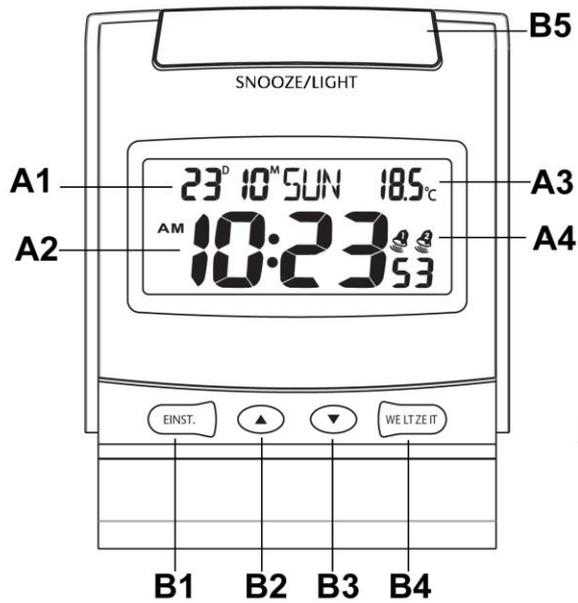

Front view

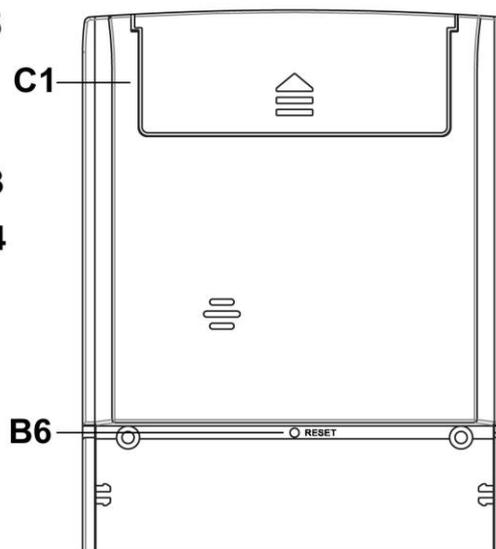

Back view

A LCD-Display

A1: Date & weekday

A2: Time

A3: Temperature

A4: Alarm icon

B Tasten

B1: MODE button

B2: ▲ button

B3: ▼ button

B4: W-TIME button

B5: SNOOZE/LIGHT button

C1 Batteriefach

Time display for

32 world cities:

Local and world time display

in duo mode



Quick setup:

Insert 1 x AAA batteries into the battery compartment.

Time setting:

1) Press and hold the **MODE** button (B1) for 3 seconds, the hour digits flash.

2) Press the ▲ (B2) or the ▼ (B3) buttons to adjust time and date. The settings have the following

sequence: Year, Month, Date, Language for week, Hour, Minute, Second and Local time (DST on/off).

Press each time the **MODE** button (B1) to switch to the next setting.

The weekday display can be selected in 7 languages: German, French, Spanish, Italian, Dutch, Danish and English. The languages and their selected abbreviations for each weekday are shown in the following table:

	GER	FRA	ESP	ITA	NET	DAN	ENG
Monday	MO	LU	LU	LU	MA	MA	MO
Tuesday	DI	MA	MA	MA	DI	TI	TU
Wednesday	MI	ME	MI	ME	WO	ON	WE
Thursday	DO	JE	JU	GI	DO	TO	TH
Friday	FR	VE	VI	VE	VR	FR	FR
Saturday	SA	SA	SA	SA	ZA	LO	SA
Sunday	SO	DI	DO	DO	ZO	SO	SU

3) Press the **MODE** button (B1) to confirm the settings.

Note: Seconds can only be adjusted to zero.

12/24h time display:

Press the ▼ button (B3) to change between the 12 (AM/PM) or 24 hour time display.

Time display for 32 world cities:

- 1) Press and hold **W-TIME** button (B4) for 3 seconds to enter world time mode.
- 2) Press the ▲ (B2) or ▼ (B3) buttons to select a city.

Stadt	Kürzel
1. Amsterdam	AMS
2. Barcelona	BCN
3. Kopenhagen	CPH
4. Frankfurt	FRA
5. Paris	PAR
6. Amman	AMM
7. Athen	ATH
8. Cape Town	CPT
9. Cairo	CAI
10. Istanbul	IST
11. Jerusalem	JRS

Stadt	Kürzel
12. Moskow	MOW
13. Dubai	DBX
14. Bangkok	BKK
15. Beijing	PEK
16. Hong Kong	HKG
17. Singapur	SIN
18. Tokyo	TYO
19. Sydney	SYD
20. Wellington	WLG
21. Dublin	DUB
22. London	LON

Stadt	Kürzel
23. Rio de Janeiro	RIO
24. Falkland Lsds	FAL
25. Havana	HAV
26. New York	NYC
27. Washington DC	WAS
28. Ottawa	YOW
29. Chicago	CHI
30. Mexico City	MEX
31. Los Angeles	LAX
32. Alaska	ALA

3) Press the **W-TIME** button (B4) to turn on or off the DST mode for the selected city.

4) Press and hold **W-TIME** button (B4) for 3 seconds to return to date display.

Setting of 2 alarms:

- 1) Press the **MODE** button (B1) to select alarm 1 . Press the **MODE** button (B1) again to select alarm 2 . The  icon for alarm 1 or alarm 2 flashes.
- 2) During the selected alarm, press the ▲ button (B2) to turn on or off this alarm.
- 3) During the selected alarm, press and hold the **MODE** button (B1) for 3 seconds, the hour digits flash. Press the ▲ (B2) or the ▼ (B3) buttons to adjust the alarm time. Press the **MODE** button (B1) to switch

from hour to minute setting. Press the **MODE** button (B1) to confirm the settings.

4) Press the **MODE** button (B1) again to return to normal time display.

Snooze function:

Press the **SNOOZE/LIGHT** button (B5) during the alarm. The alarm is temporarily interrupted and will sound again after 4 minutes.

Press any other button to stop the snooze alarm.

Backlight:

Press the **SNOOZE/LIGHT** button (B5) to turn on the backlight for 3 seconds.

ATTENTION!

- *Never use the clock in rooms with high humidity (e.g. bathroom).*
- *The operating temperature is between 0°C and 50°C.*
- *All settings will be lost after battery replacement.*



Consideration of duty according to the battery law

Old batteries do not belong to domestic waste because they could cause damages of health and environment. End-users are committed by law to bring back needed batteries to distributors and other collecting points!